

Programming the RF Remote: (second stream) = 55, (third stream) = 65 or 14

Follow these steps in order to program the 55 & 65 remotes. When programming the RF remote you have to be in front of the STB.

The following outlines the steps to programming the RF remote controls.

1. Program Home ID
 - a. Hold down STB button while pressing OK.
(Push them down at same time)
 - b. Release and you will see the 4 mode keys flash twice.
 - c. Enter "914" – STB button flashes twice
 - d. Enter "100" – STB button flashes twice
 - e. Point Remote to set top box and press "enter"
(at the bottom of remote right hand side)
 - f. Press "enter" again

2. Programming the Decoder ID
 - a. Hold down STB button While pressing the OK button
 - b. Release and the four mode keys will flash twice
 - c. Enter "912" – STB button
 - d. Enter "2" if you are programming the 55 remote, and if you are programming the 65 remote press "3"
 - e. STB button flashes three times.

Use this next step if you want to program the remote to the TV. Ex: would be to turn TV on & off or to adjust volume. This is used for the main stream.

3. Programming the remote to your TV
 - a. Turn on the TV
 - b. Point the remote at the TV
 - c. Press the TV button while holding it down press the "OK" button at the same time.
 - d. Release both buttons and the mode key will blink twice
 - e. Press the code 922. The TV button blinks twice
 - f. Point the remote at the device, press and hold "PLAY" button. The remote will search each code
 - g. When the corrected code is found the TV will shut off. As soon as the TV powers off, release the "PLAY" button.
 - h. Press the rewind (REW) key once every second until the TV turns ON. This may have to be done 5 or 6 times until it turns on. Once the TV turns on press "ENTER" bottom right of remote.